

APsystems ECU-R Quick Installation Guide


This guide is for reference only and assumes you have access to, and have read the detailed instructions in the ECU-R Users Manual (available at APsystems.com).

Step 1: Power-on ECU-R

- Make sure the adapter is properly connected to the power port on the top of the ECU-R.
- Plug the adapter into a dedicated standard AC electrical outlet.

Step 2: Antenna Up ECU-R


- Make sure the antenna is properly connected to corresponding position on the top of the ECU-R.

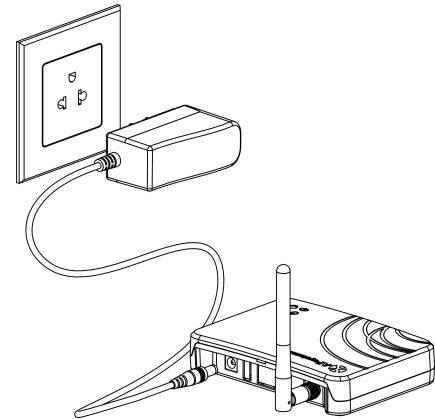

Step 3: Connect microinverter to ECU-R.

1 : Open the ECU APP.


2 : Connecting to the ECU-R via the Local Wireless, the default password is “88888888”.

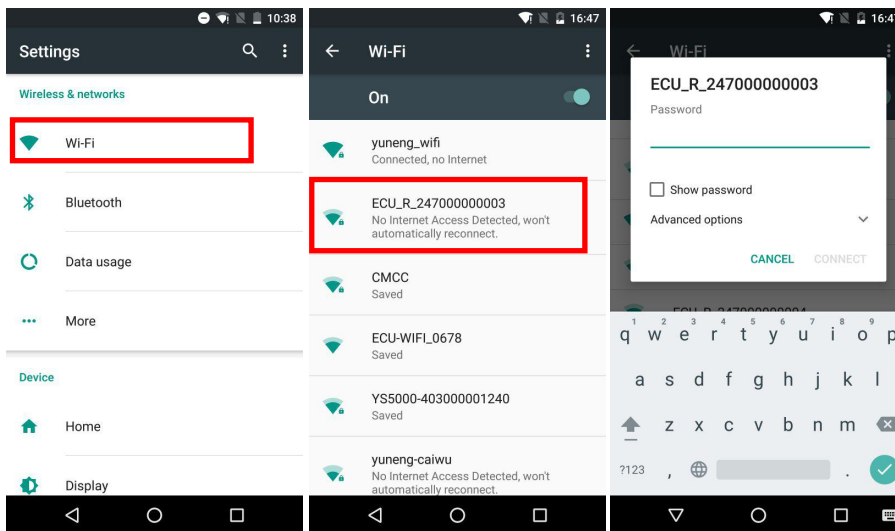


3: Click settings, select the ID management, input the ID ,click OK to complete. If you want to clean up all the IDs, please click “CLEAR ID “.

4: Select “Home” at the bottom of the page.The Home Page is displayed.

5: View the real-time system operation data statistics for your solar array.

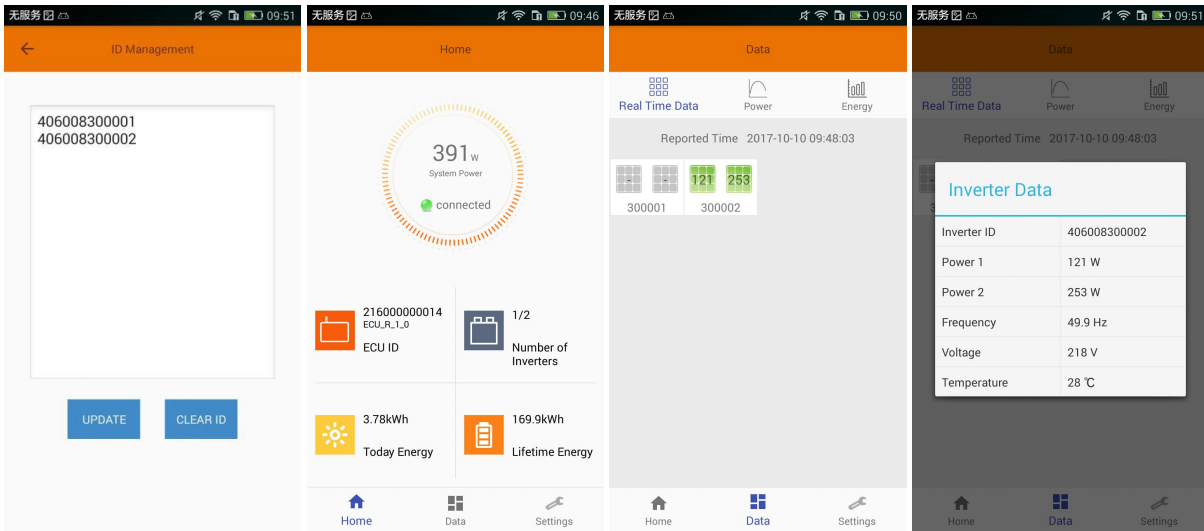

6: Configure IDs、date、 Network Connection and WLAN connection.

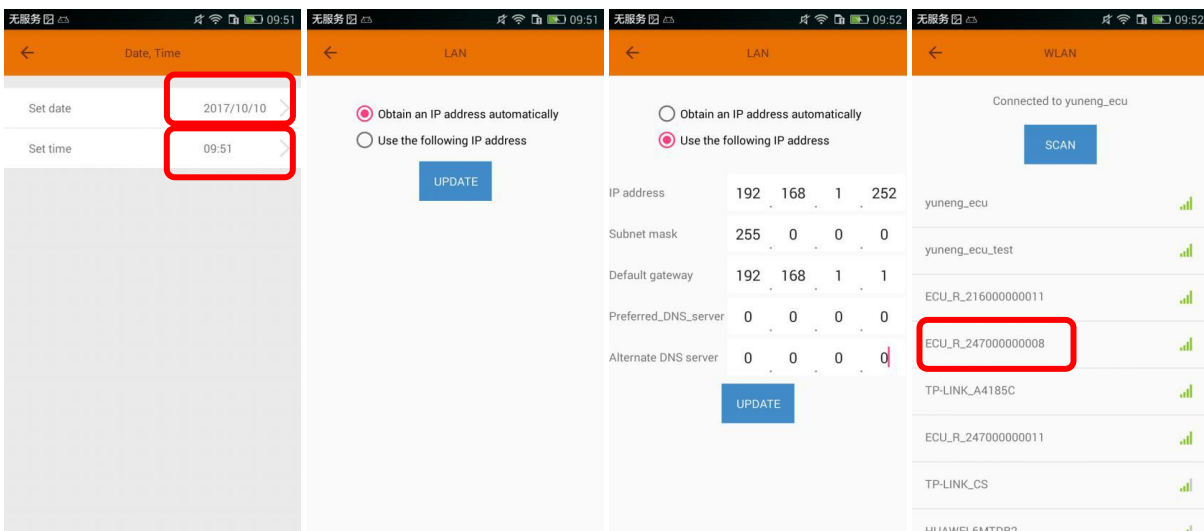

7: Switch Language.

